





ASSEMBLY INSTRUCTIONS FOR SINGLE DOOR CABINET ROLL OUT TRAYS






Thank you for choosing Pacific Teak Millworks outdoor cabinetry! You have selected the most beautiful, finest quality outdoor living cabinetry available. Properly installed and cared for, your teak cabinetry will provide a lifetime of beauty, enjoyment and flawless operation for your new outdoor living area.

CONTENTS:

Cabinet Components:

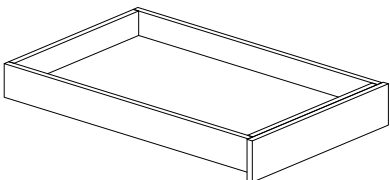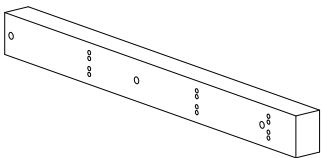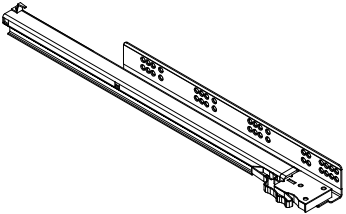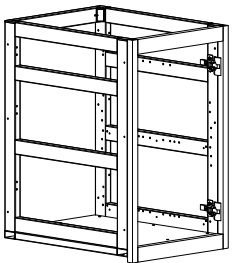No	Item
1	 Roll Out Tray: 2 ea.
2	 Tray Support: 2 ea.
3	 Drawer Glide: 4 ea.
4	 Cabinet Chassis: <i>Sold Separately</i>

Assembly Hardware:

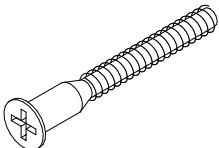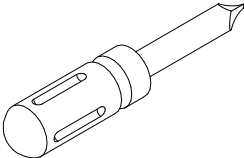
Code	Item
A	 Euro Screw: M6 x 11mm. 12 ea.
B	 Häfele® M5 x 38mm PZ2 Confirmat Screw: 6 ea.
C	 Phillips Head Screwdriver: <i>Not included</i>

Before you begin.

- Please read these instructions completely and thoroughly before you begin assembly and installation.
- Pacific Teak Millworks outdoor cabinetry must be installed by an experienced cabinet installer.
- If your cabinets will be installed with a barbeque grill or other cooking appliances, consult the appliance manufacturer's instructions regarding "Clearances to Combustibles". An insulated liner may be required.
- Note that all holes needed for normal cabinet assembly are precisely located during the CAD fabrication processes, and no drilling is generally required. We recommend using standard hand tools for assembly to prevent damage. If using power tools to assemble cabinets, be sure to adjust the force to the lightest possible setting. Overtightening could strip the screws, aluminum cabinet components, or damage the plastic SISO corner brackets.

! WARNING: Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to: www.P65Warnings.ca.gov/wood.

Cabinet Frame Side Hole Matrix:



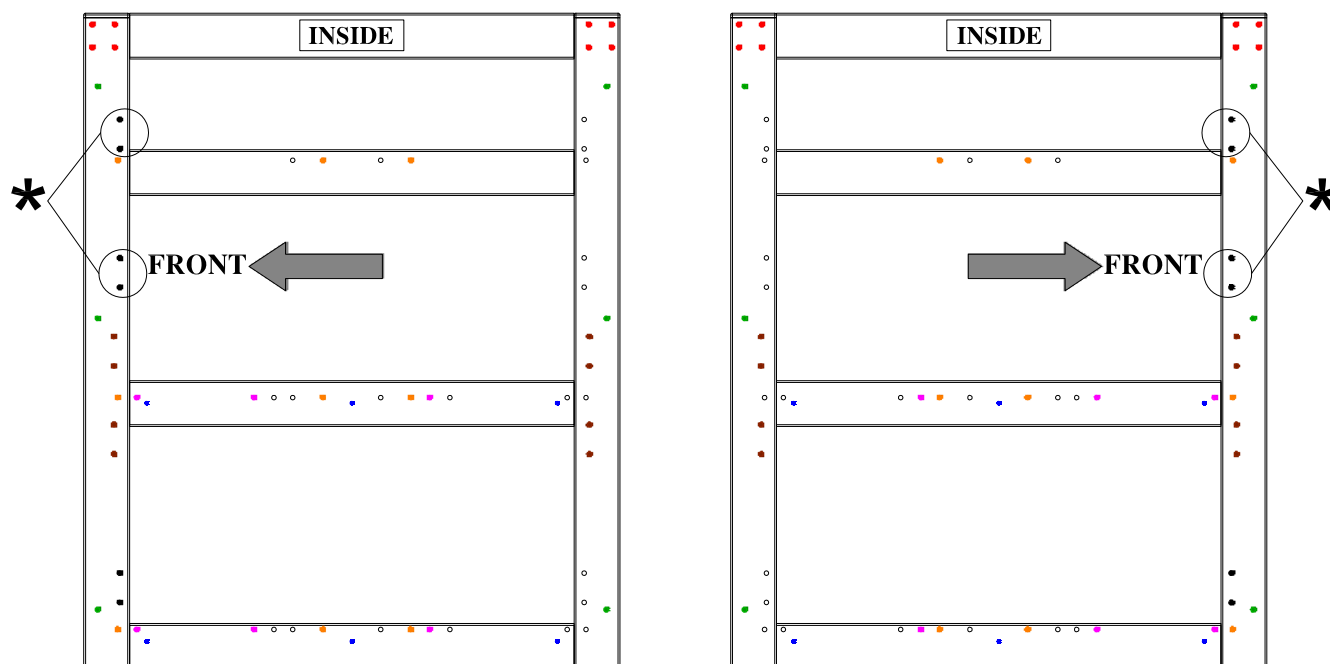


- Hole Siso Corner Fix
- Hole Connector HÄFELE Conformat PZ2 drill.gal. 5x38mm
- Hole BLUM Clip mounting plate
- Hole Shelf

- Hole Panel Drawer
- Hole Drawer Roll Out Tray
- Hole Drawer Bloc Upper & Bottom
- * Can be used for door stop on 13" & 18" door chassis


Step 1. Install Tray Support

*** Install On Hinge Side**

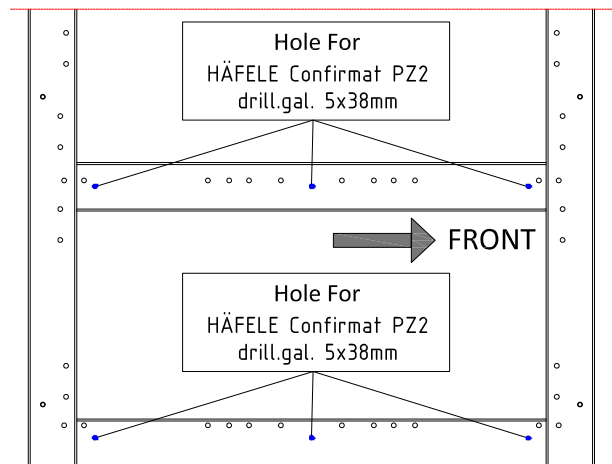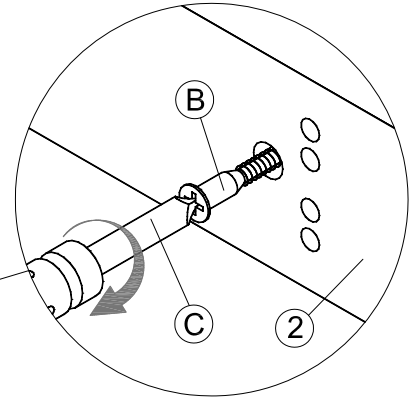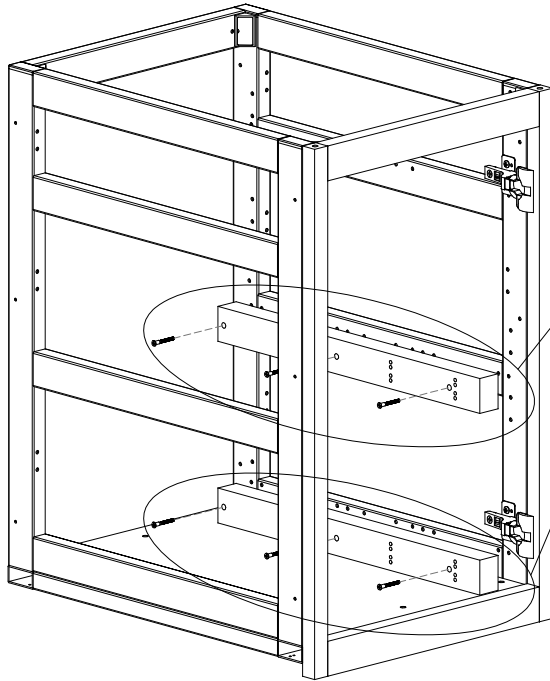


Step 2. Right Hinge Shown


*** For Left Version Do The Opposite**

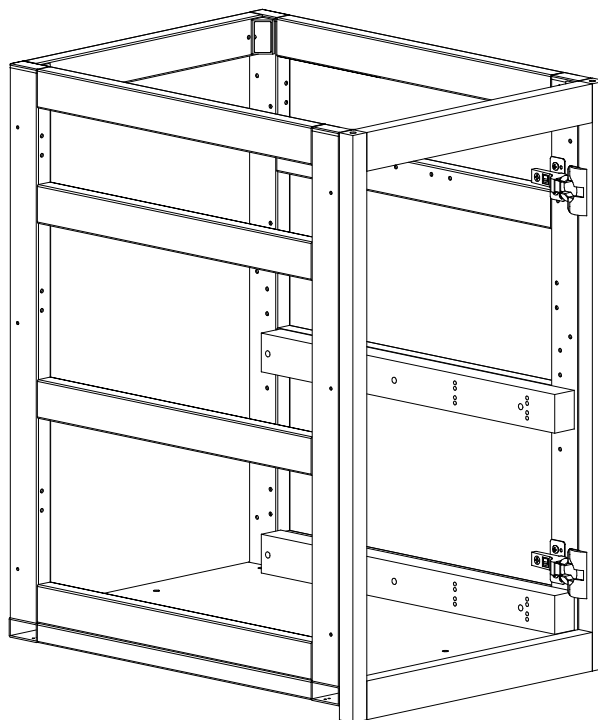


Step 3. Install Drawer Glides (Hinge Side)

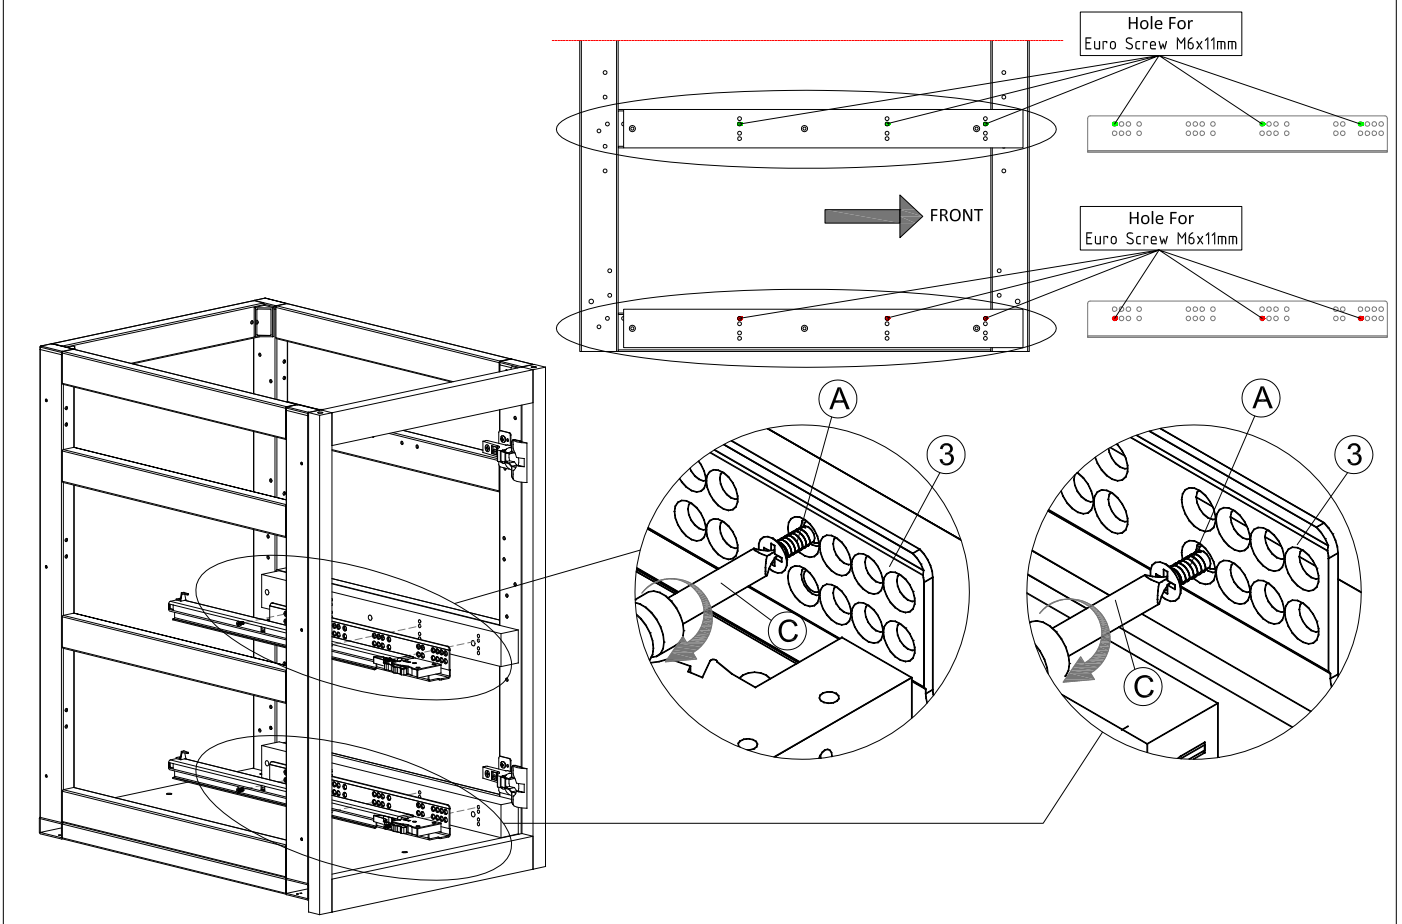

Step 4. Install Drawer Glides (Non-Hinge Side)

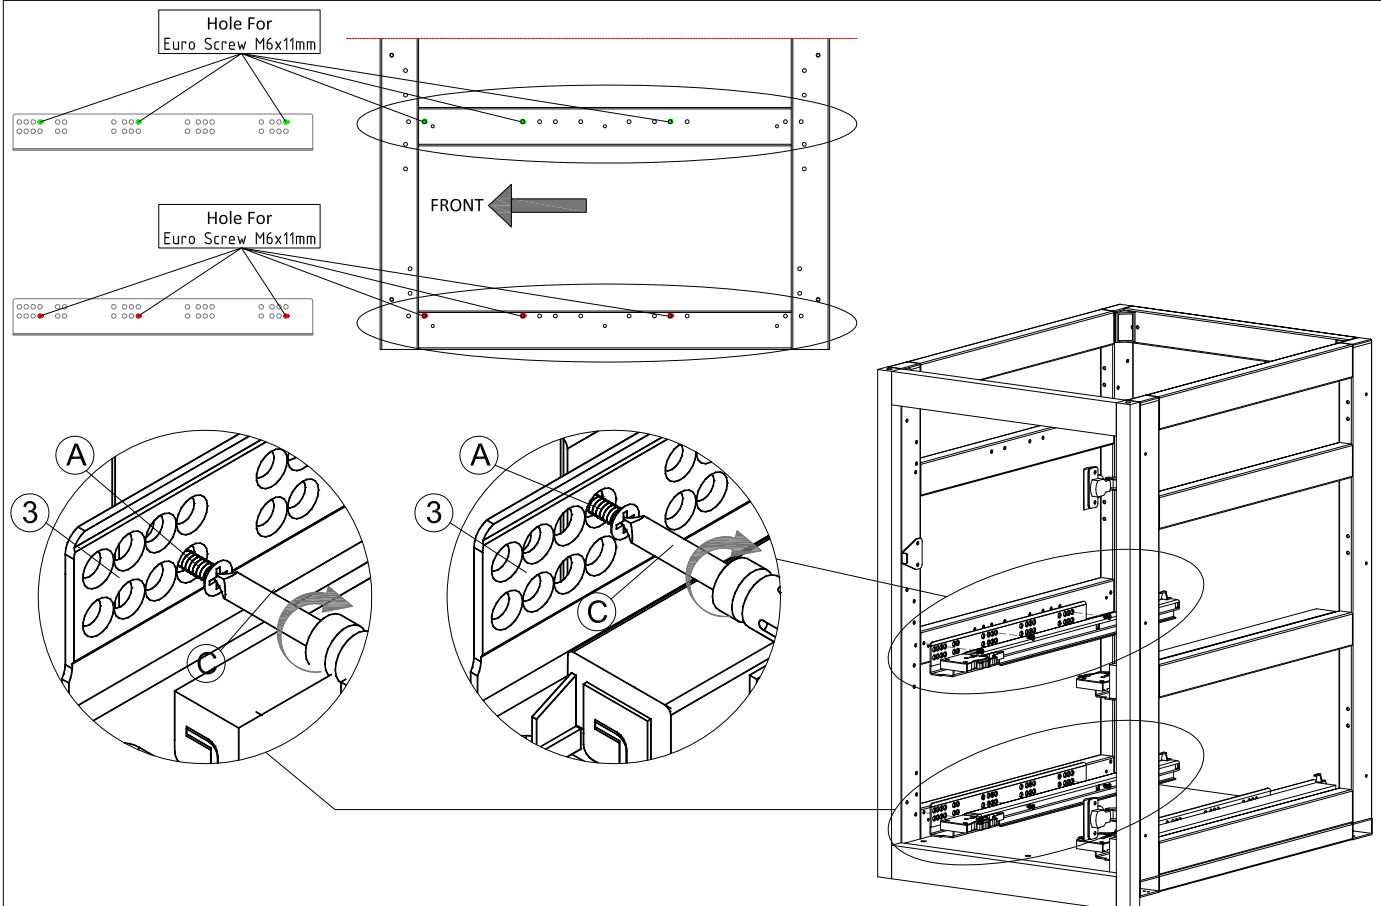

Step 5. Install Roll Out Trays

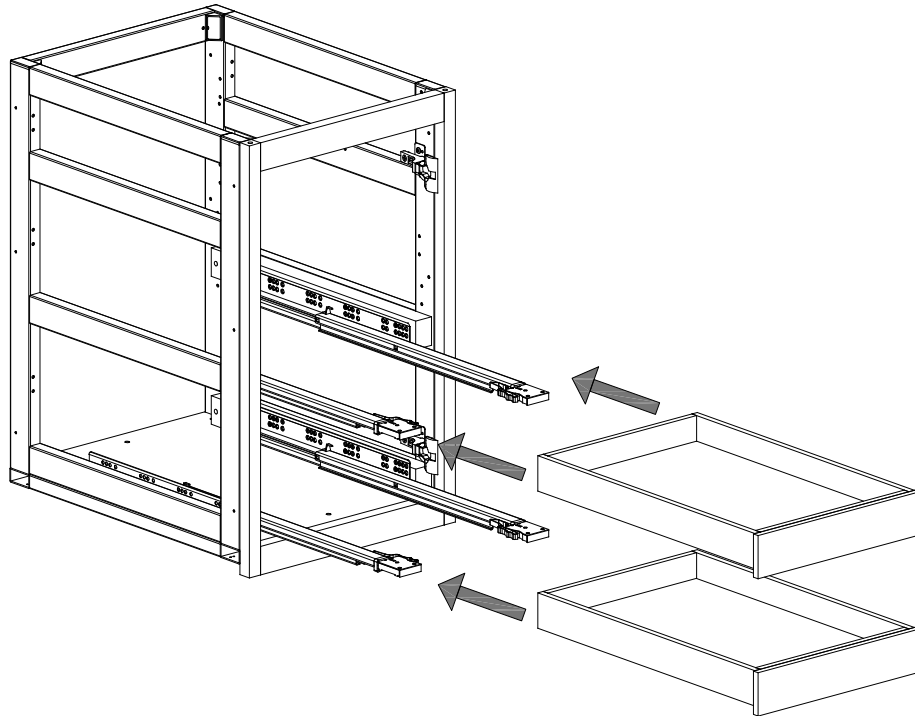

Step 6. Hinge Left of Hinge Right

